




PO Box 6256
 Mobile AL, 36606
 1-800-771-6643

SPRAY FOAM DETAILS

Roof Drain

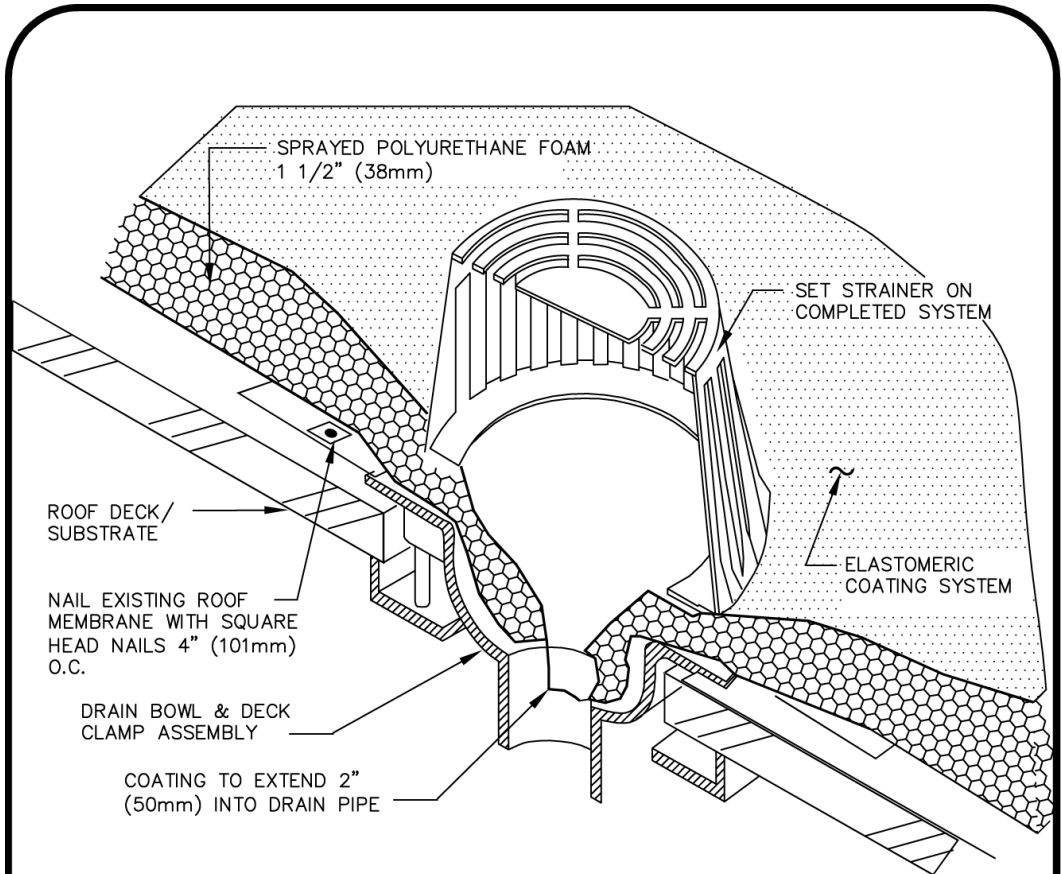

NOTES:

1. FOAM MUST BE CUT OUT IF NECESSARY TO PRESERVE EXISTING DRAIN SIZE.
2. TEMPORARILY COVER DRAIN TO PERFORM FOAM APPLICATION TO ENSURE NO DEBRIS ACCUMULATES IN DRAIN PIPE.
3. SHAPE (GRIND) FOAM AROUND THE BOWL TO MAKE STRAINER FLAT AND IN CONTACT WITH ROOF TO PREVENT PASSAGE OF DEBRIS INTO DRAIN.
4. SLOPE FOAM TO DRAIN TO PREVENT PONDING OF WATER AROUND DRAIN.

Roof Drain



P.O. Box 6256
 Mobile, AL 36660
 1-800-771-6643 - Toll Free
 251-476-7385 - Office
 251-479-3602 - Fax

Sales@WeatherStar.net
 www.AmericanWeatherStar.com